

## Product Datasheet V4.0

500mW TTL/RS232/RS485 Interface  
Industrial Anti-interference Wireless Transceiver  
Data Transmission Module

**SV651**



## Catalog

1.	Overview.....	3
2.	Feature.....	3
3.	Application.....	3
4.	Block Diagram.....	3
5.	Electrical Characteristics.....	4
6.	Operation.....	4
1)	Power on Reset.....	4
2)	Sleep mode.....	5
3)	Working Mode .....	5
4)	Setting mode .....	7
5)	Communication Protocol .....	8
6)	RSSI index .....	10
7)	Parameters Description: .....	10
7.	Application circuit.....	12
8.	Pin definition.....	13
9.	Accessories .....	14
10.	Mechanical dimension .....	15
11.	Order information .....	15
12.	FAQ.....	16
	Appendix: SMD reflow chart .....	17

### Note: Revision History

Revision	Date	Comment
V1.0	2011-9-2	First release
V2.0	2012-5-6	Updated data rate to 115200bps
V3.0	2014-10-28	Add Delay time
V4.0	2015-4-18	Add communication protocol

## 1. Overview

SV651 is an Industrial class & highly-integrated RF transceiver module, which adopts the high performance Si4432 from Silicon Labs and industrial micro-controller . TTL / 232 /485 can be chosen corresponding to SV651-TTL / SV651-232 / SV651-485. SV651 has good sensitivity and 500mW output power to achieve long RF range and reliable RF communication. To avoid the interference, SV651 provides 40 frequency channels and configurable Net ID. SV651 is flexible but easy to use , it comes with many parameters, such as: frequency, data rate, output power, Net ID, Node ID. Users can configure the parameters through PC or customer's own device.


## 2. Feature

- 433/470/868/915 MHz  
(Customizable 240-930 MHz)
- Industrial class
- 40 channels
- 4 bytes Net ID & 2 bytes Node ID
- Series Data Rate: 1200 ~ 115200 bps
- Air Data Rate: 1200 ~ 115200 bps
- GFSK modulation
- RSSI
- Interface: TTL/RS232/RS485
- Antenna matching automatically
- Bi-directional & Half duplex
- Sensitivity: -121 dBm
- Max output power: 500 mW (+27 dBm)
- Working voltage: 3.3 ~ 6.5 V
- Working temperature: -40 ~ +85 °C
- Weight: 14.0 g
- Parameters save automatically

## 3. Application

- Remote control telemetry
- Security system
- Industrial data acquisition
- Home automation
- Wireless data communication
- Access system
- Robot control
- Wireless PC peripherals

## 4. Block Diagram

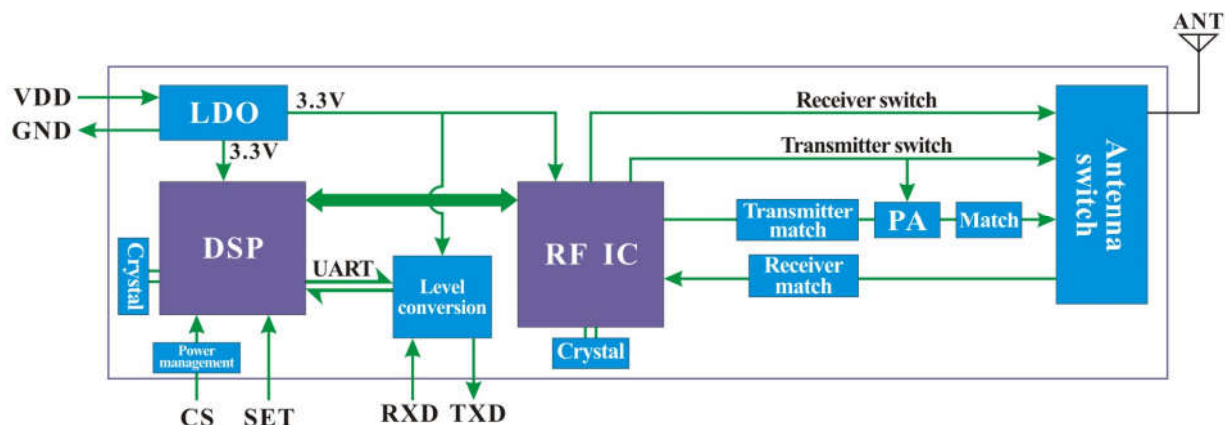

## 5. Electrical Characteristics


Note: High quality 3.3V LDO is integrated, and Pin CS / SET is 3.3V interface. TXD/RXD is also 3.3V for SV651-TTL

Parameters	Min.	Typ.	Max.	Unit	Condition
Working condition					
Voltage range	3.3	5.0	6.5	V	
Operating Temperature	-40	25	+85	°C	
Current consumption					
Rx current		25		mA	TTL level
		34		mA	485 level
		32.7		mA	232 level
Tx current		350		mA	@27dBm
Sleep current		<5		uA	@TTL level
RF parameters					
Frequency range	414.92	433.92	453.92	MHZ	@433MHZ
	470.92	470.92	509.92	MHZ	@470MHZ
	849.92	868.92	888.92	MHZ	@868MHZ
	895.92	914.92	934.92	MHZ	@915MHZ
Data rate	1.2	9.6	115.2	Kbps	GFSK
Output power	20	/	+27	dBm	
Sensitivity		-121		dBm	@1.2kbps

## 6. Operation

### 1) Power on Reset

After powered on reset, the TX LED (Red) and RX LED (Blue) will blink 3 times , The total reset time is around 2s, as below:

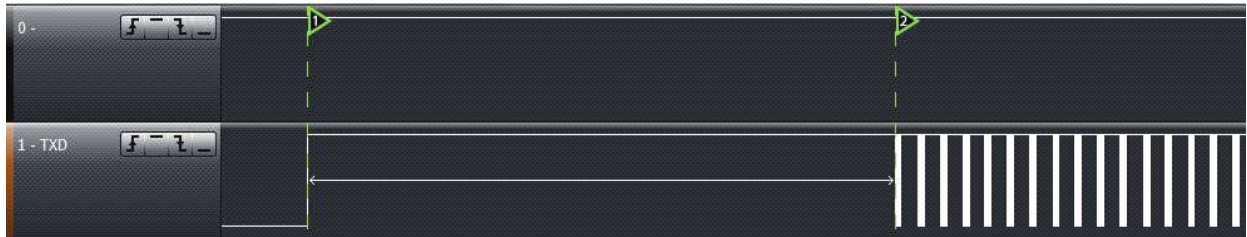

Note: Contact us to customize if you want to shorten the POR time.

## 2) Sleep mode

After Power on Reset, the module enters into sleep mode when CS pin is pulled low. In this mode, the current consumption is very small. In Sleep mode, the module can't do any communication and can't be set even Set Pin is pulled low. All the parameters will be kept unchanged in Sleep mode. User can wake up the module by pulling high the CS Pin.

## 3) Working Mode

The CS and SET Pin is internally pulled up. Pull CS pin high or leave it open will make SV651 enter into working mode.

	Sleep mode	Working mode	Setting mode
CS	0	1*	1*
SET	X	1*	0

★ 1\*: connected to 3.3V or leave open.      X: don't care

In working mode, SV651 stay in receiving mode and wait for the series signal and RF signal.

SV651 can connect with any device which is standard 232/485/TTL interface.

When series signal comes, SV651 will check the input series signal if there is any error, and then transmit the received data out via RF automatically if no errors found.


When RF signal comes, SV651 will check the input RF signals if there is any error, and then transmit the received data out via series port automatically if no errors found.

When one packet is transmitted successfully, the Red LED will blink once.

When one packet is received and verified with no problem, the Blue LED will blink once.

The easiest way to test the module is using computer. The corresponding PC software is "Series Debugging assistant" can be downloaded at : <http://www.nicerf.com/downpwd.aspx?id=102>, the password for download is "nicerf". User can use our USB bridge board (SU108 -TTL / SU108-232 /SU108-485) to connect SV651 with computer.

The GUI of the software is as below:

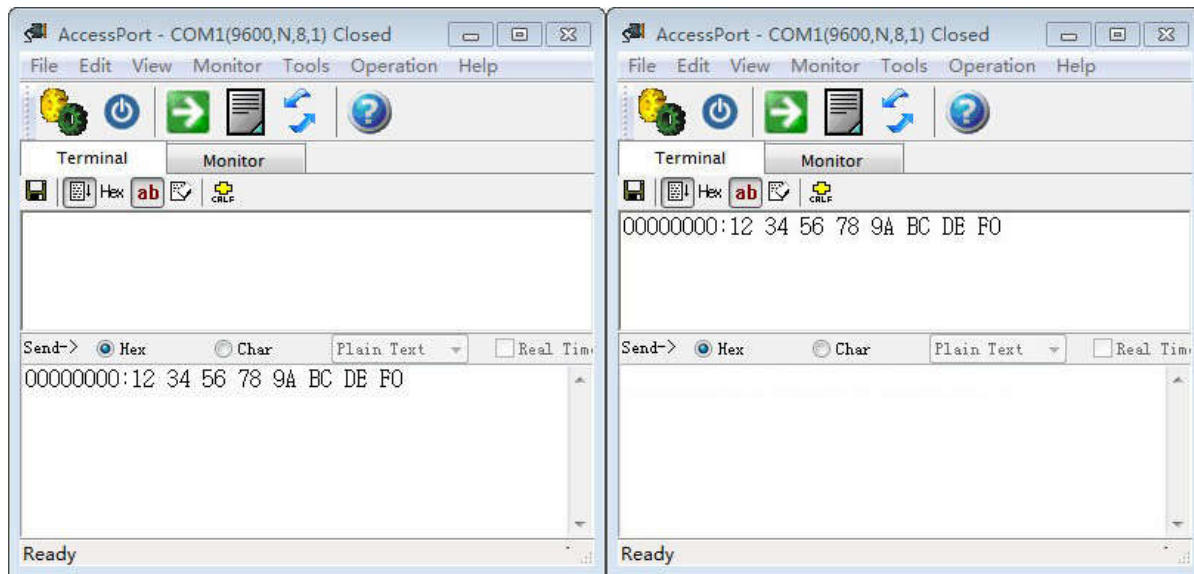

★ To ensure the stability of communication, please notice the following tips:

a) Parameter matching

The series parameter between the device and SV651 should be same,

RF parameters should be same in Tx and Rx.


The Net ID should be same in Tx and Rx.

b) Delay Time

Data delay is exist between series input of the transmitter and series output of the receiver. This

Delay Time is different from the series data rate, RF data rate and payload length. Detailed value is as

below:

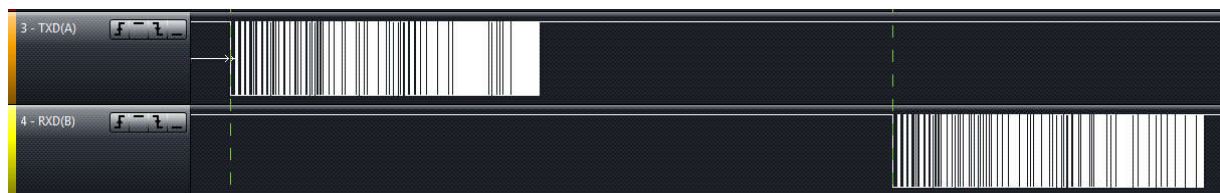

Speed rate	1200	2400	4800	9600	14400	19200	38400	57600	76800	115200
1byte transceiver time(ms)	140	70	37	21	15	13	9	8	8	7
56bytes transceiver time(ms)	945	475	241	124	85	65	36	26	21	16

c) Long package transmission


One packet more than 200 bytes is a long package. The RF data should be set higher than series data

for long package transmission. The distance will be shorter with higher RF data rate.

#### 4) Setting mode

In working mode, pull low the SET pin to force SV651 into setting mode. When using USB bridge board, simply put on the short cap to enter into setting mode.

In setting mode, both blue and red LED will light on, shown as below:

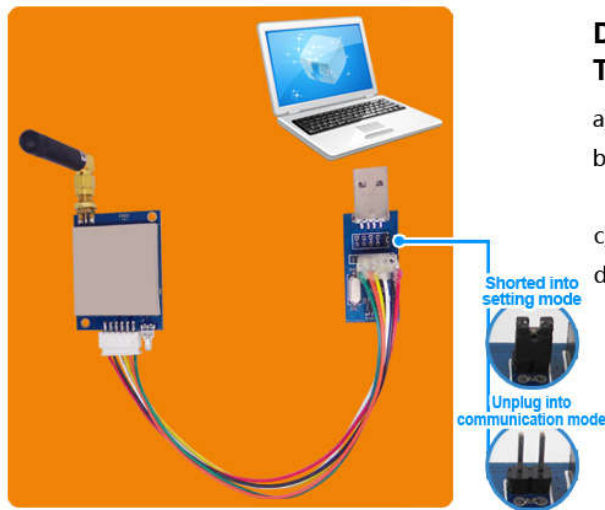

In setting mode, users can set the parameters by PC software or customer's own device. The parameters will be stored and keep unchanged even powered off.

Step to set the module with PC:

- ◆ Download the PC software at: <http://www.nicerf.com/downpwd.aspx?id=103>, the password is "nicerf".
- ◆ Download the USB driver at: <http://www.nicerf.com/downpwd.aspx?id=105>, the password is "nicerf".
- ◆ Install the PC software and USB driver into computer.
- ◆ Connect RF module with USB Bridge, put on the short cap, and insert into the PC.
- ◆ Open the PC software, the GUI is as below:

Select the right COM port and click "OPEN" button, all the parameters stored in the module will be read out and display, the status bar will appear the message "Device Found".

If SV651 hasn't connected with PC correctly or wrong COM port is chosen, the status bar will show "Device Not Found".


**NiceRF** 深圳市思为无线科技有限公司  
 思为无线 NiceRF Wireless Technology Co., Ltd  
 TEL: 0755-61596687 [www.nicerf.com](http://www.nicerf.com)

**Model** 
**Version**

**Net Parameters**

**NET ID** 
**NODE ID**

**AUTO ADD 1** ☒

**Serial Parameters**

**Baud Rate** 
**Parity**

**Data bit** 
**Stop**

**RF Parameters**

**Band** 
**Channel** 
**Frequency**

**Data Rate** 
**Power**

官方淘宝商城: <http://nicerf-sz.taobao.com>

Device Found!

#### Note: About the Net ID and Node ID

After connected with PC correctly, all the parameters can be set freely including Net ID and Node ID.

The Net ID is the group name for transmitter and receiver, all the transmitter and receiver with the same Net ID can communicate with each other. The only exception is 0000. When the Net ID is set as 0000, it can receive the signal of all the transmitter even the Net ID is not 0000.

The Node ID can be thought as the name of the module. Each module can be set with one Node ID. The Node can set and read out freely. The Node ID can be used in the application which the receiver should identify who is the transmitter. User can read out the Node ID of the module, and add the Node ID into the payload, then in Rx side, it can identify who is the transmitter.

### 5) Communication Protocol

Besides PC, user can set all the parameters by their own device. The communication protocol is as below:

Baud rate=9600 bps;    Data bit=8 bits    Stop bit:1    Parity bit: none

**a) Command : Read module name and version:**

Instruction format: AA FA AA

Return value is: "SV651\_VERx.x\r\n"

For example:

Instruction: AA FA AA

Return: SV651\_Ver4.6\r\n.


**b) Command: Read out all the parameters:**

Instruction format: AA FA 01

The return value in turn is:

RF channel / RF band / RF data rate / RF power / Serial data rate / Series Data bit / Series Stop bit / Series Parity bit / NET ID / NODE ID \r\n

For example, when module is default setting, the return are as below:

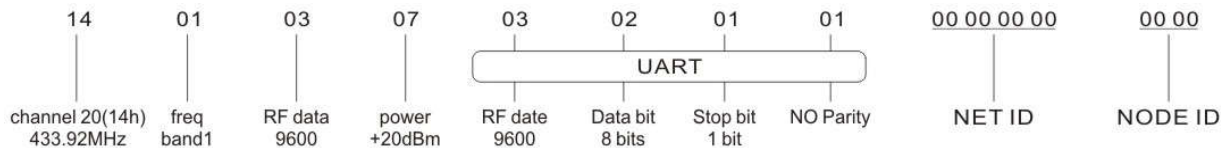
**c) Command : Reset to default setting**

Instruction format: AA FA 02

The return value in turn is: "OK\r\n" or "ERROR\r\n"

After this command , the module will reset to default setting ,which is

Frequency : Tx = Rx = CH20 = 433.92 MHz (Band = 433MHz)

RF data rate: Tx = Rx=9600 bps

RF power= 7 (Max output)

Serial: baud rate = 9600 bps Data bit= 8 Bits Stop bit = 1 Bits Parity bit=None

NET ID = 00 00 00 00 NODE ID = 00 00

**d) Command: Set the group parameters**

Length of the command is 17 bytes, set 14 bytes of the parameters into the module, and format as follows:

Instruction format: AA FA 03 RF Channel / RF Band / RF Rate / RF Power / Serial transmission date / data bits / stop bits / parity / NET ID / NODE ID

The return is: "OK\r\n" or "ERROR\r\n"

## 6) RSSI index

The RSSI index value can only be read out in setting mode. The real time RSSI index is updated by incoming signal.

Instructions format: AA FA 04

Return: RSSI index\00\r\n (hexadecimal, range: 0x00~0xff)


RSSI index range: 00 ~ FFh

For example:

Instruction format: AA FA 04

Return:32 00 \r\n.

Relationship between RSSI and input power is as below

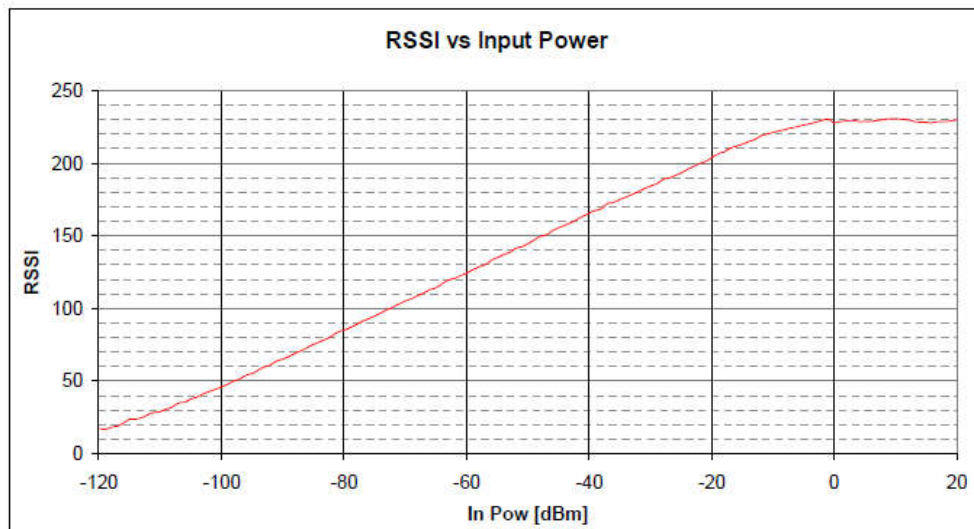

## 7) Parameters Description:

### a) RF Channel = RF Frequency

Each frequency band is divided into 40 channels; user can select one of the 40 channels to use. The corresponding frequency is as below, Also we can customized the specified frequency which is not in the table.

frequency band1	channel	1	2	3	4	5	6	7	8	9	10
<b>433MHz</b>	frequency	414.92	415.92	416.92	417.92	418.92	419.92	420.92	421.92	422.92	423.92
	channel	11	12	13	14	15	16	17	18	19	20
	frequency	424.92	425.92	426.92	427.92	428.92	429.92	430.92	431.92	432.92	433.92
	channel	21	22	23	24	25	26	27	28	29	30
	frequency	434.92	435.92	436.92	437.92	438.92	439.92	440.92	441.92	442.92	443.92
	channel	31	32	33	34	35	36	37	38	39	40
	frequency	444.92	445.92	446.92	447.92	448.92	449.92	450.92	451.92	452.92	453.92
frequency band2	channel	1	2	3	4	5	6	7	8	9	10
<b>470MHz</b>	frequency	470.92	471.92	472.92	473.92	474.92	475.92	476.92	477.92	478.92	479.92
	channel	11	12	13	14	15	16	17	18	19	20
	frequency	480.92	481.92	482.92	483.92	484.92	485.92	486.92	487.92	488.92	489.92
	channel	21	22	23	24	25	26	27	28	29	30
	frequency	490.92	491.92	492.92	493.92	494.92	495.92	496.92	497.92	498.92	499.92
	channel	31	32	33	34	35	36	37	38	39	40
	frequency	500.92	501.92	502.92	503.92	504.92	505.92	506.92	507.92	508.92	509.92
frequency band3	channel	1	2	3	4	5	6	7	8	9	10
<b>868MHz</b>	frequency	849.92	850.92	851.92	852.92	853.92	854.92	855.92	856.92	857.92	858.92
	channel	11	12	13	14	15	16	17	18	19	20
	frequency	859.92	860.92	861.92	862.92	863.92	864.92	865.92	866.92	867.92	868.92
	channel	21	22	23	24	25	26	27	28	29	30
	frequency	869.92	870.92	871.92	872.92	873.92	874.92	875.92	876.92	877.92	878.92
	channel	31	32	33	34	35	36	37	38	39	40
	frequency	879.92	880.92	881.92	882.92	883.92	884.92	885.92	886.92	887.92	888.92
frequency band4	channel	1	2	3	4	5	6	7	8	9	10
<b>915MHz</b>	frequency	895.92	896.92	897.92	898.92	899.92	900.92	901.92	902.92	903.92	904.92
	channel	11	12	13	14	15	16	17	18	19	20
	frequency	905.92	906.92	907.92	908.92	909.92	910.92	911.92	912.92	913.92	914.92
	channel	21	22	23	24	25	26	27	28	29	30
	frequency	915.92	916.92	917.92	918.92	919.92	920.92	921.92	922.92	923.92	924.92
	channel	31	32	33	34	35	36	37	38	39	40

## b) Working Band

The working band is as below

Parameter	01	02	03	04
Frequency	433 MHz	470 MHz	868 MHz	915 MHz
	414.92 ~ 453.92	470.92 ~ 509.92	849.92 ~ 888.92	895.92 ~ 934.92

**Note: Changing working band is not suggested**

## c) RF data rate

The RF data rate is as below :

Parameter	0	1	2	3	4	5	6	7	8	9
TX/RX rate(bps)	1200	2400	4800	9600	14400	19200	38400	57600	76800	115200

## d) RF output power

The output power is as below:

Set level	0	1	2	3	4	5	6	7
TX/RX power	24.06 dBm	26.38 dBm	27.6 dBm	28.00 dBm	28.00 dBm	28.00 dBm	28.00 dBm	28.00 dBm

#### e) Serial baud rate

Series data rate is as below: .

Parameter	0	1	2	3	4	5	6	7	8	9
Serial rate(bps)	1200	2400	4800	9600	14400	19200	38400	57600	76800	115200

#### f) Serial data bit

Series data bit is as below:

Parameter	1	2	3
Data Bits	7 bits	8 bits	9 bits

#### g) Serial stop bit

Series stop bit is as below:

Parameter	1	2
Stop bit	1 bits	2 bits

#### h) Serial parity

Series Parity bit is as below:.

Parameter	1	2	3
Parity bit	No	Odd	Even

#### i) NET ID:

The Net ID is 4 bytes, and range from 00 00 00 00 to FF FF FF FF

Note: if the modules' NET ID setting are different, then they can't communicate with each other except when the Net ID = 0000, it will receive all the message despite the Net ID is difference.


#### j) NODE ID

The Node ID is 2 bytes, range from 00 00 to FF FF.


## 7. Application circuit

The typical schematic circuit is as below:


Note: The ground pin of the module and device should be connected together.

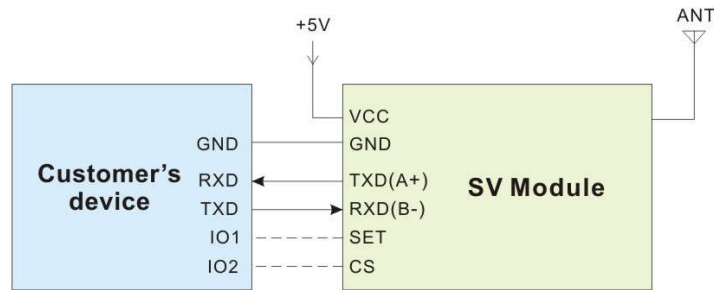

Typical application::

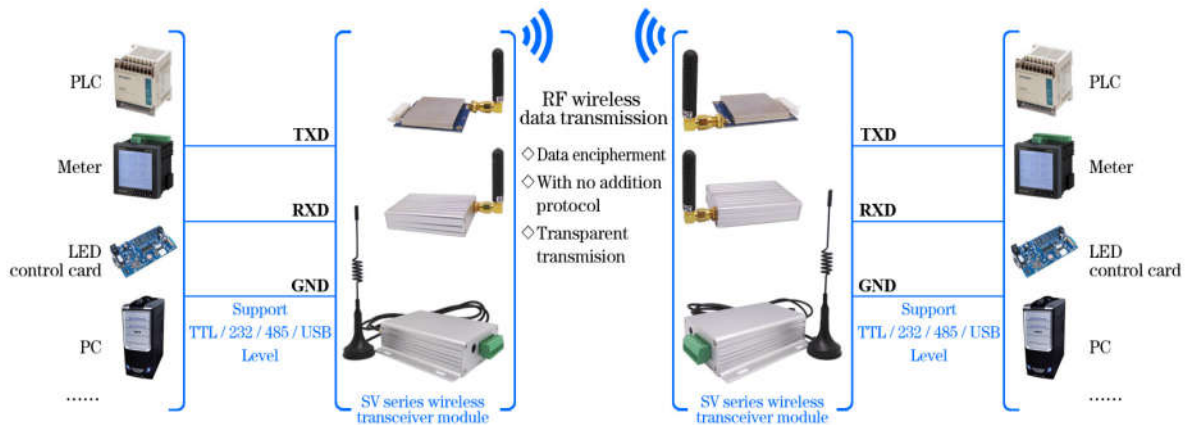

## 8. Pin definition

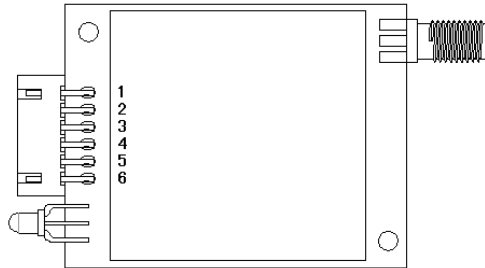


Pin No.	Definition	Description
1	VCC	Connected to the positive power supply (typical 5V)
2	GND	Connected to ground
3	TXD	TXD of the module and connect to external RXD
4	RXD	RXD of the module and connect to external TXD
5	SET	Configuration mode enable (low to enter into the setting mode, leave open or connect high level to exit setting mode) Valid when CS Pin is high or leave open.
6	CS	Module working Enable (Pull Low to make the module enter into sleep mode, Leave open or connect high level make the module enter into

		normal working mode)
--	--	----------------------

## 9. Accessories

### 1) Antenna

The antenna is very important for RF communication. We have many kinds of antenna for customer to choose, please contact the corresponding sales engineer for help.

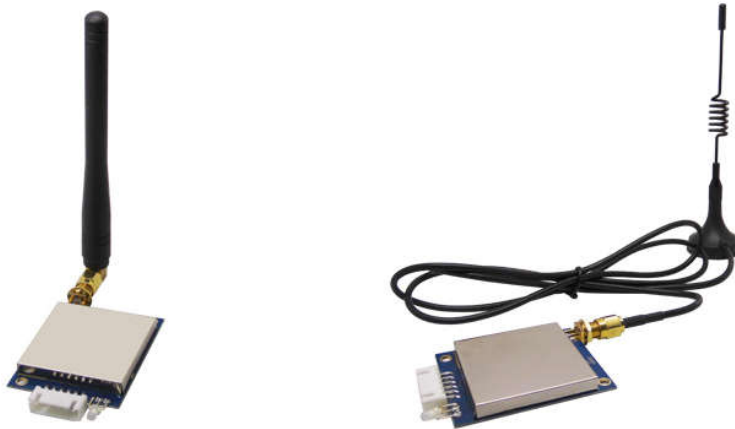


#### ★ Tips for antenna:


- Don't close to the ground, metal, magnet, big current;
- If you are using the sucker antenna, pull the wire as straight as possible, the sucker foundation should stick with metal

### 2) USB bridge board


There are 3 type of USB bridge, which is SU108-TTL/ SU108-232 / SU108-485. SU108 -TTL is for TTL Interface, SU108-232 is for 232 Interface, SU108 - 485 is for 485 Interface. User should select the right USB bridge corresponding to the RF module.

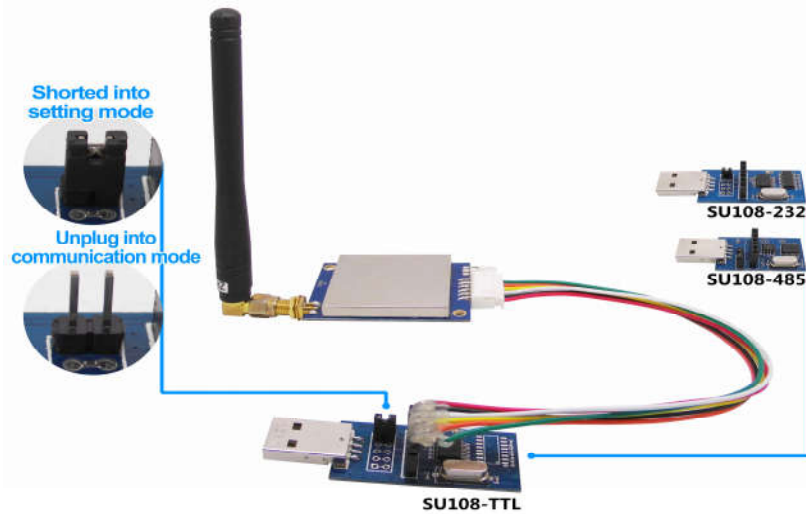

## 10. Mechanical dimension

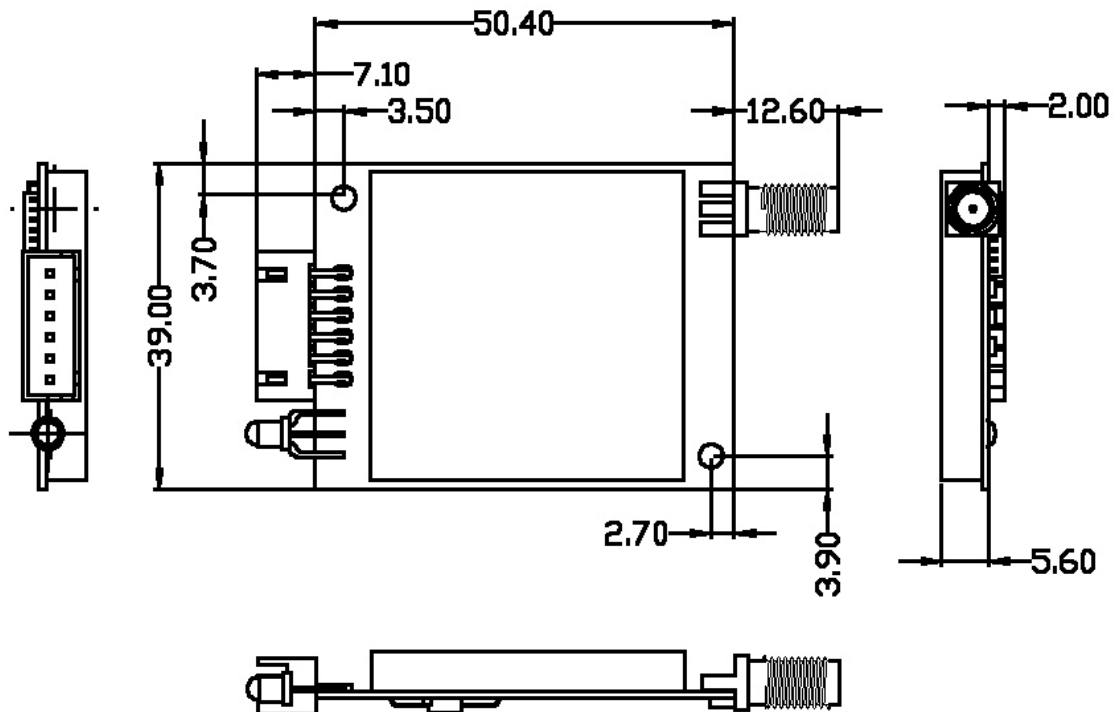

## 11. Order information

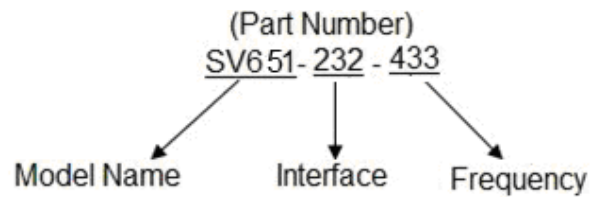

**For example:**

If the customer needs 433MHZ band with 232 Interface then part number of released order shall be:

SV651-232-433

Product Name	Description
SV651-TTL- 433	433MHZ, TTL interface
SV651-232- 433	433MHZ, 232 interface
SV651-485- 433	433MHZ, 485 interface
SV651-TTL- 470	470MHZ, TTL interface
SV651-232- 470	470MHZ, 232 interface
SV651-485- 470	470MHZ, 485 interface
SV651-TTL- 868	868MHZ, TTL interface
SV651-232- 868	868MHZ, 232 interface
SV651- 485- 868	868MHZ, 485 interface
SV651-TTL- 915	915MHZ, TTL interface
SV651-232- 915	915MHZ, 232 interface
SV651-485 -915	915MHZ, 485 interface


## 12. FAQ

- Why module can not communicate properly?
  - a) Check if the band, channel, rate, NET ID has set to the same;
  - b) Check if there is power connection error;
  - c) Check if the module is enabled (CS high);
  - d) Check if the antenna connection is not correct;
  - e) Check if the module is damaged.
- Why transmission distance is not far as it should be?
  - a) Power supply ripple is too large;
  - b) The antenna types do not match, or not properly installed;
  - c) The surrounding environment is harsh, strong interference sources;
  - d) Surrounding co-channel interference;
- Why receiving data incorrect?

- a) Improper parameter settings;
- b) Module data interface is bad.

## Appendix: SMD Reflow Chart

We recommend you should obey the IPC related standards in setting the reflow profile:

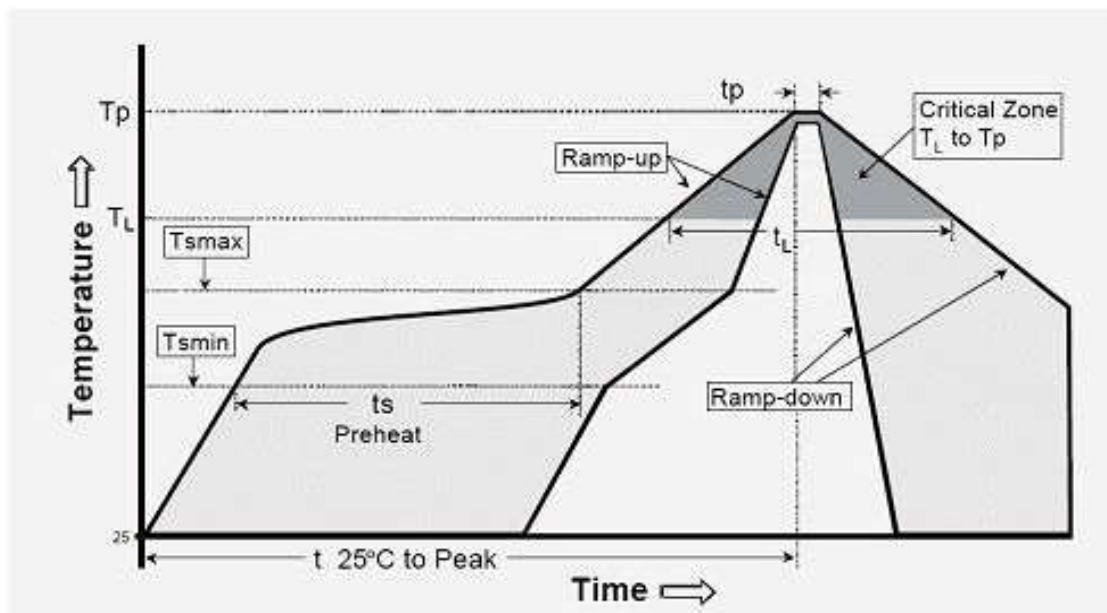

IPC/JEDEC J-STD-020B the condition for lead-free reflow soldering	big size components (thickness $\geq 2.5\text{mm}$ )
The ramp-up rate (Tl to Tp)	3°C/s (max. )
preheat temperature - Temperature minimum (Tsmin) - Temperature maximum (Tsmax) - preheat time (ts)	150°C 200°C 60~180s
Average ramp-up rate(Tsmax to Tp)	3°C/s (Max. )
- Liquidous temperature(TL)	217°C
- Time at liquidous(tL)	60~150 second
peak temperature(Tp)	245+/-5°C